
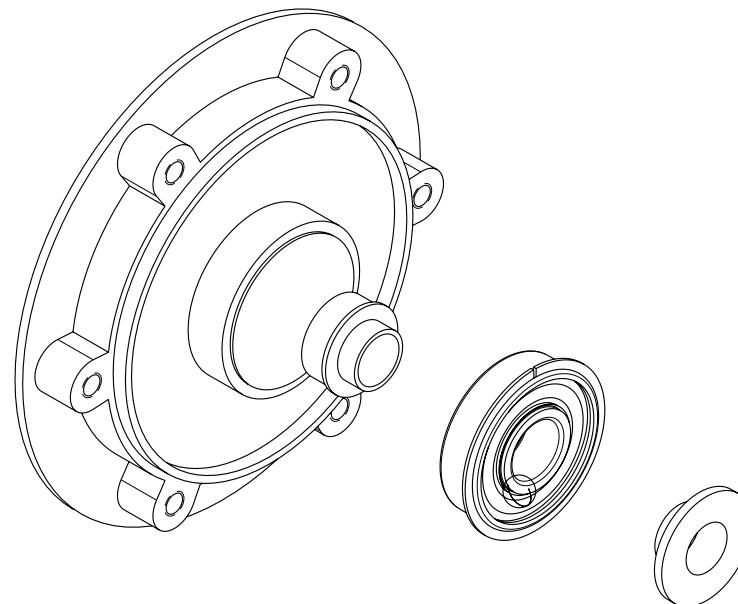





* These notes and dim's are for reference only

SECTION A-A



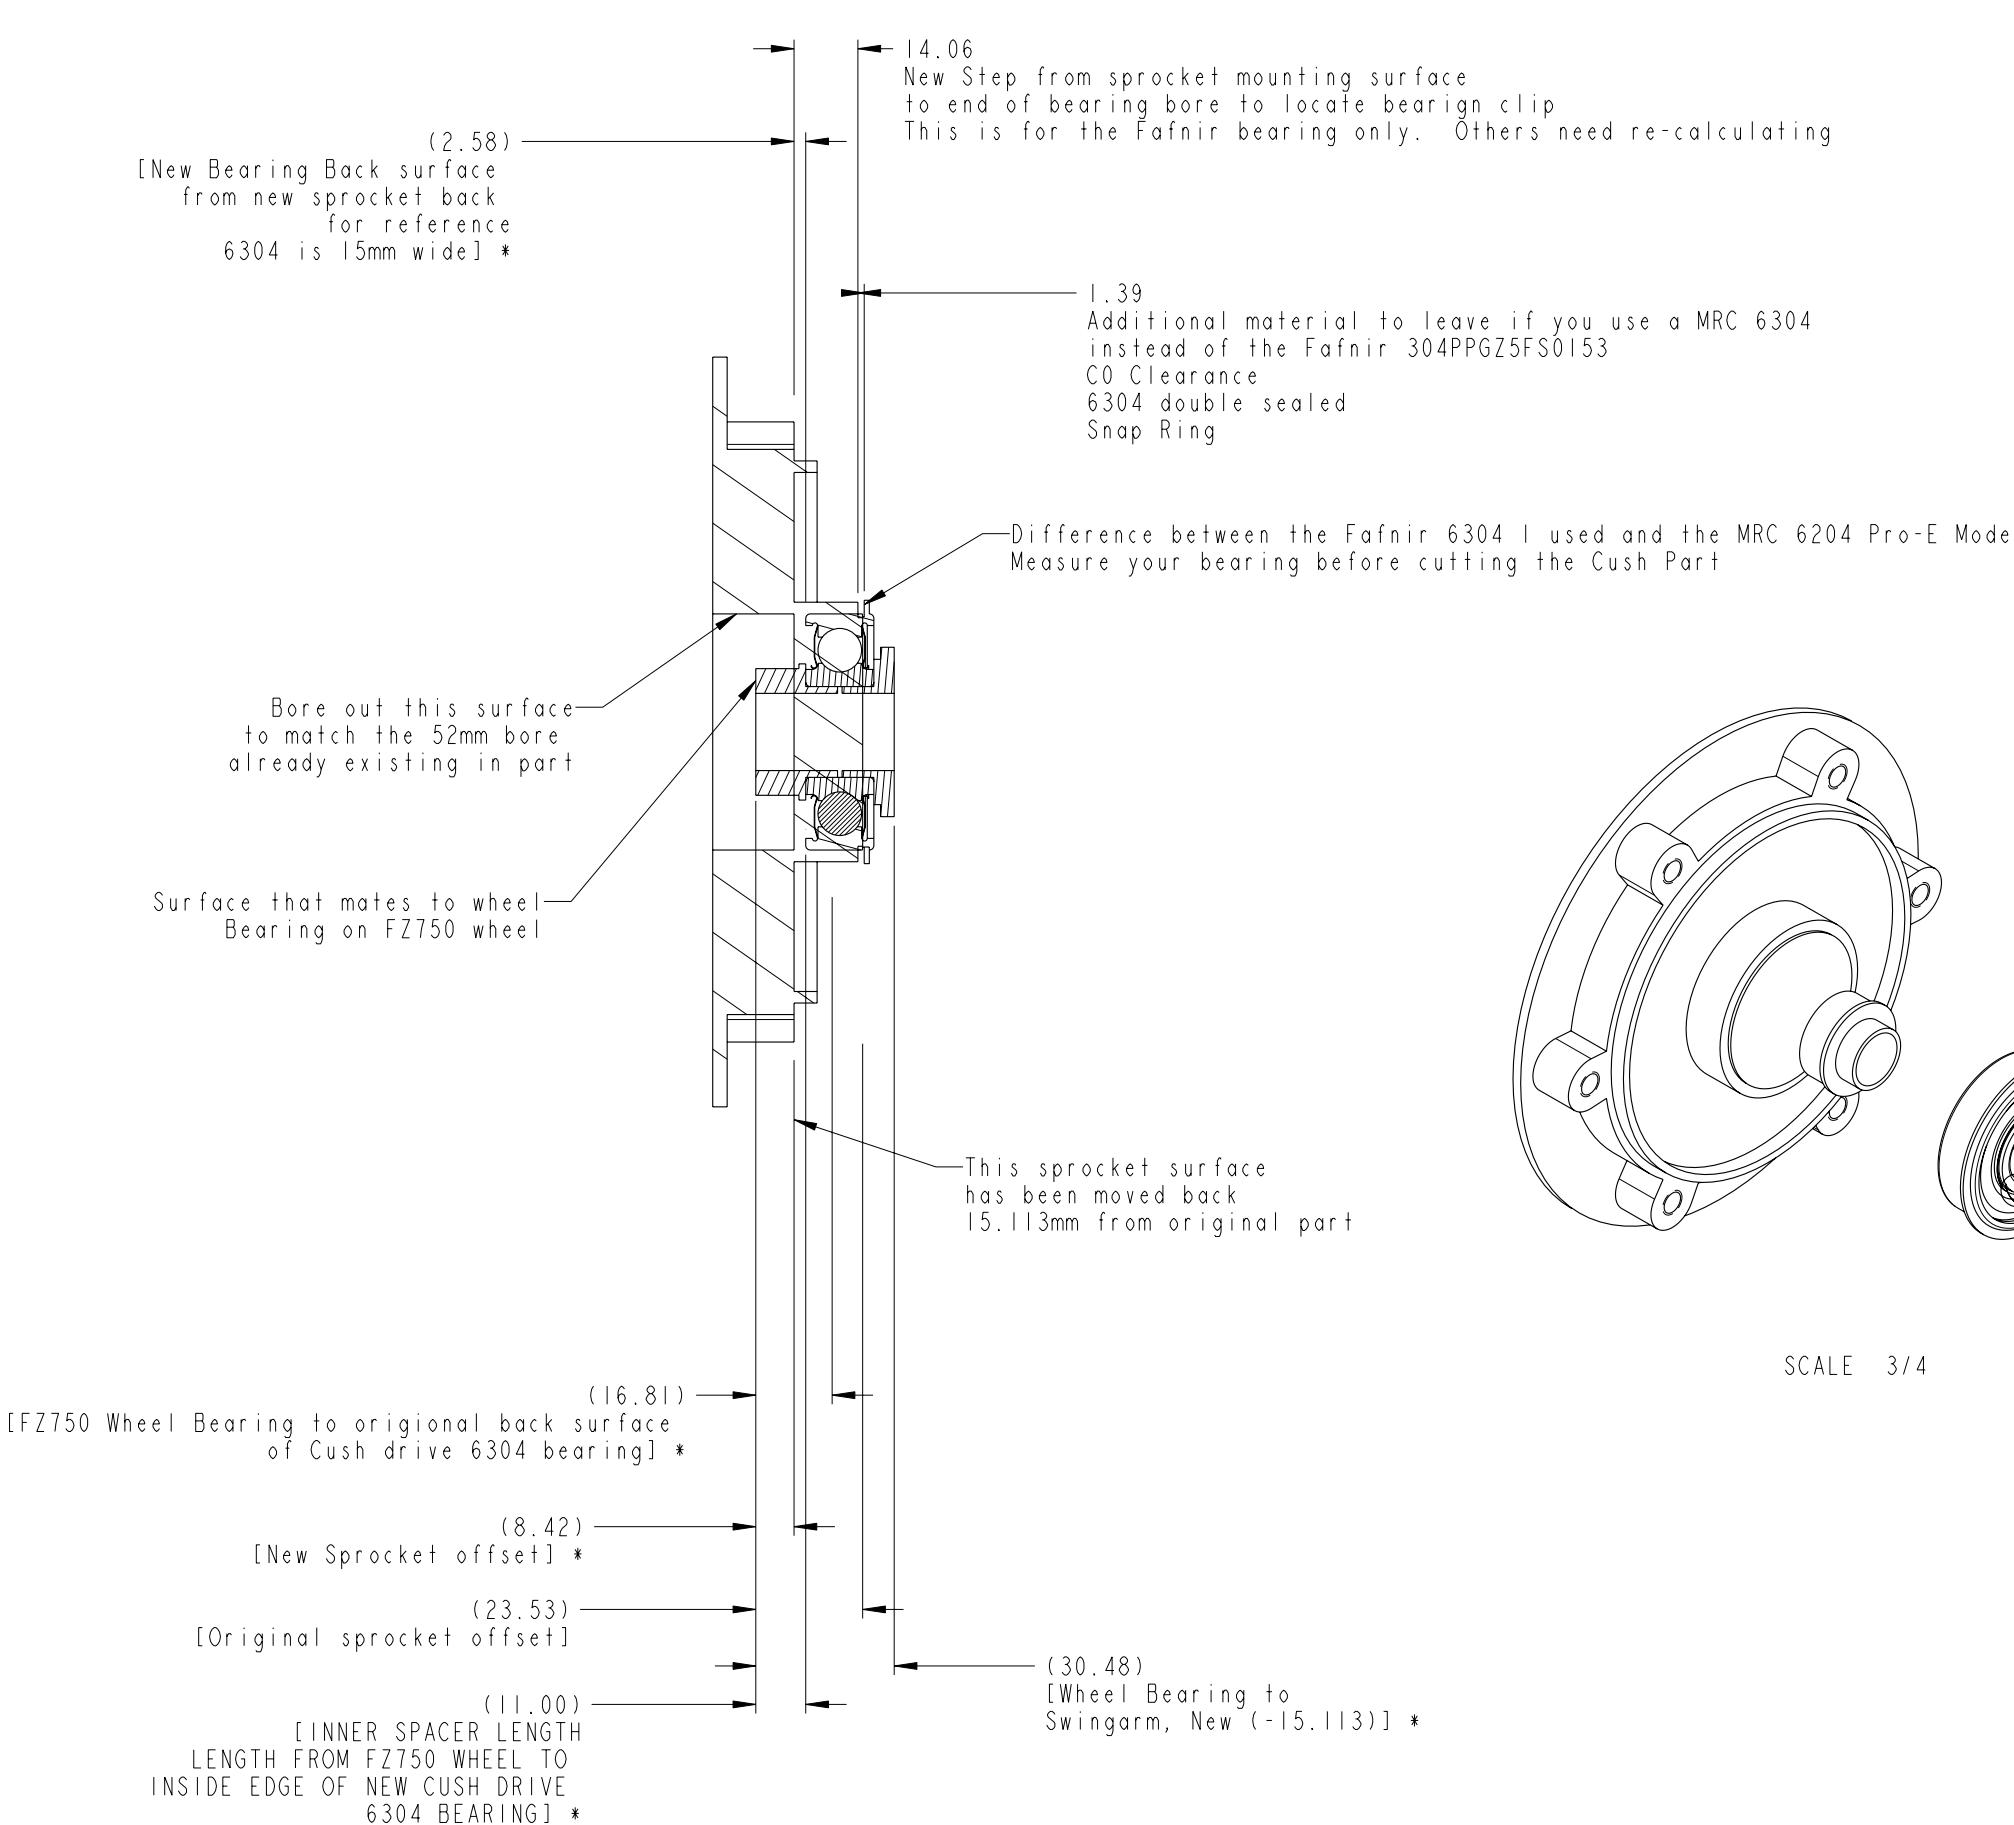


SCALE 3/4

All Dim's in (###.##) are reference only.
 The inside spacer is cut to 11mm and 7mm.
 This accounts for the movement in the back
 side of the bearing and allows for pressing in
 the outside spacer to be pressed in with a 1mm
 gap to allow removal of the spacers if needed.
 The inside and outside spacer are made from
 the stock SRX spacers. The inside should come
 with the new cush drive if you choice to do so.
 The RX350 and some FJ600's use the same cush drive.

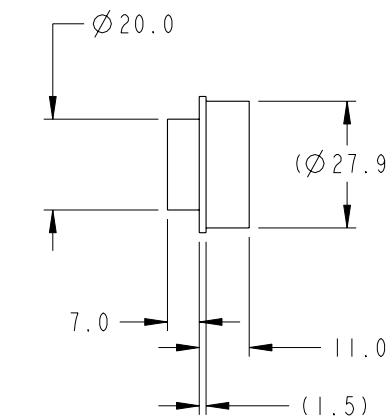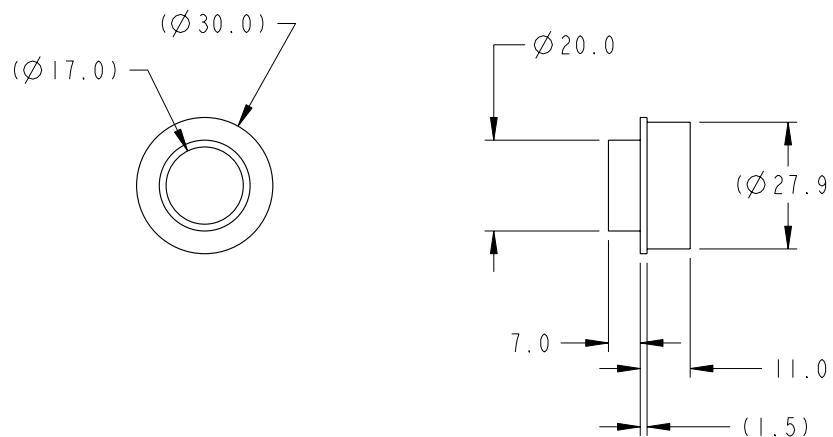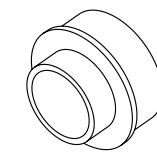

INSIDE SPACER CUTS

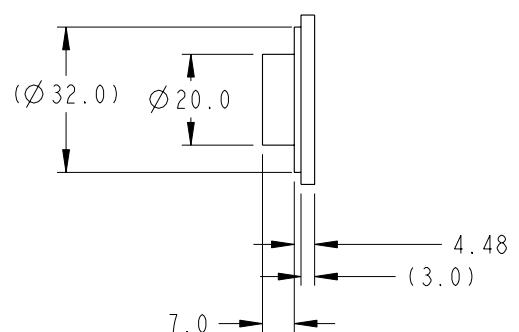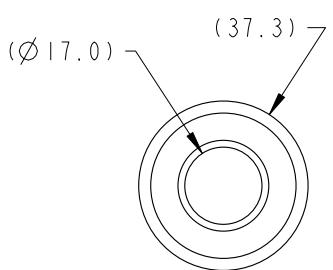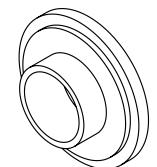

OUTSIDE SPACER CUTS